


PARTS INCLUDED & INSTRUCTIONS

- (a) Mounting Foot bracket (1 ea.) (b) L Bracket Welded Post (1 ea.) (c) Panel SS (1 ea.)
 (d) Z Bracket (1 ea.) (e) Hardware Cover (1 ea.) (f) Acorn nuts (9 ea.) (g) Wedge Anchor (1 ea.)

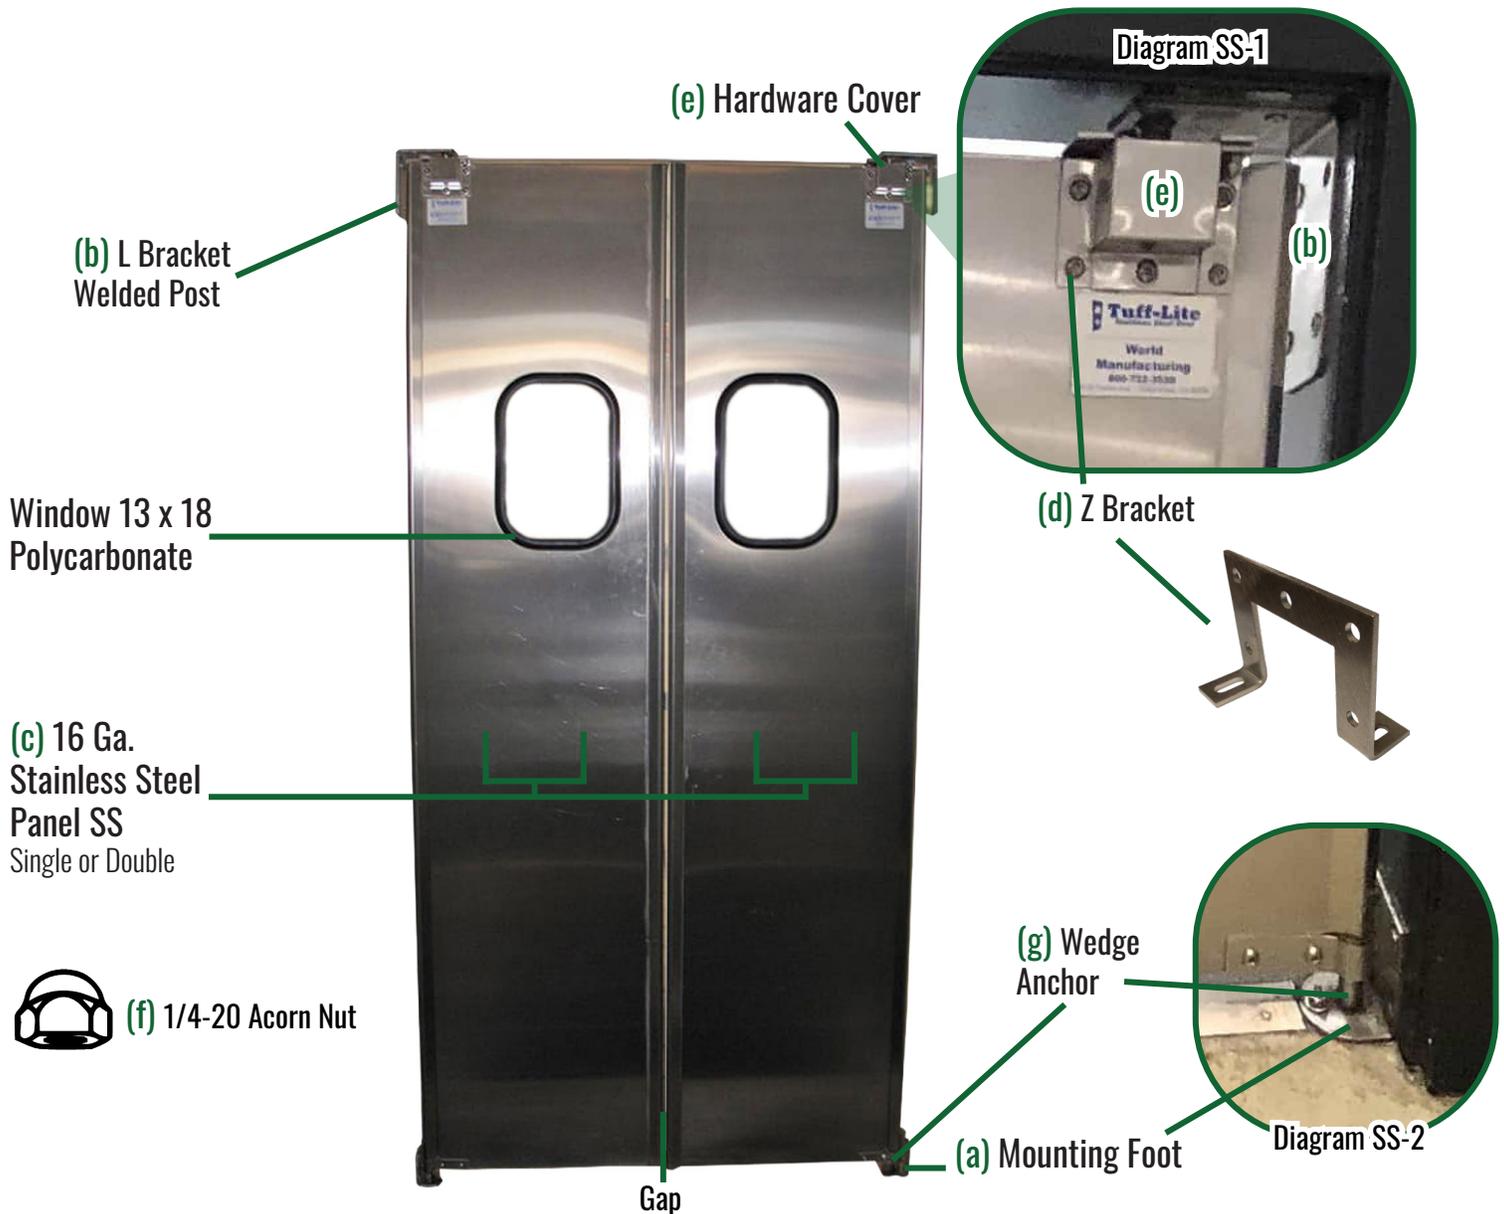

- The door jamb and header should be square 90° before installation (measure on the horizontal)
- Remove Hardware Cover (e)
- Begin installation with the Mounting Foot Bracket
 - (a) See Diagram SS-2. Drill 4 holes for the bottom jamb (mark all holes by using part (a) as a template) see Diagram SS-1 (Upper left). Then drill a hole for Wedge Anchor (e) see Diagram SS-2. Finish by tightening all screws.
- Place L Bracket Welded Post (b) perpendicular to part (a) to header and jamb (use a plumb line to center) make sure both parts align. Then drill 8 holes for the header and jamb (mark all holes by using part (b) as a template). Finish by tightening all screws.
- Place Panel SS (c) on Mounting Foot Bracket (a), swing the panel and lift to attach to Z Bracket (d) (which is located inside Hardware Cover (e)) Secure tightly by using Acorn Nuts (f).
- If door needs adjusting loosen 2 Acorn Nuts and rotate Z Bracket. Once adjusted, tighten the Acorn Nuts.